



Please note the following about the Crazyflie expansion connectors:  
 \* VCOM is always on power directly from the battery/USB and is not regulated  
 \* VCC is only on when the system is on and is regulated to 2.8V  
 \* VUSB is connected directly to the USB which means this will supply at 4.5-5.5V when the USB is connected and can be used for charging the battery when the USB is not connected



Licensed under CC-BY-NC-SA 4.0

Bitcraze AB

Sheet: /  
 File: flow.sch

**Title: Crazyflie 2.0 Flow v2 deck**

Size: A4	Date: 2018-05-02	Rev: A
KiCad E.D.A. kicad 4.0.2+dfsg1-stable		Id: 1/1